

Installation Manual

L.312.C.M

Mercedes Benz Sprinter 200/300 Series (1995-2006) Volkswagen LT 28-35 (1995-2006)













Volkswagen Crafter 28-35

L.312.C.M

CONTENTS

1.	FOREWORD	3
2.	INTRODUCTION	4
3.	VERY IMPORTANT NOTES	5
4.	COMPLETE ASSEMBLY	7
5.	INSTRUCTIONS FOR INSTALLATION	8
5.1.	Bump Stop Removal and fitting of Upper Bracket Assembly	8
5.2.	Fitting of Lower Bracket to Axle	9
	Fitting of the Air Bellow	
5.4.	Fitting of Inflator Console	12
	Tube Connection and Disconnection, Cutting and Routing	
5.6.	Spring Inflation	14
5.7.	Spring Alignment	15
	Maintenance	
6.	FPII OGUF	16

DSC Nederland B.V. Het Wegdam 22 7496 CA Hengevelde Nederland

Tel.: +31 (0)547 333065 Fax.: +31 (0)547 333068

e-mail: <u>info@dunlopsystems.nl</u> Website: <u>www.dunlopsystems.nl</u>

© 2017, DSC Nederland B.V.







Volkswagen Crafter 28-35

L.312.C.M

1. FOREWORD

This manual provides instructions for the installation of an auxiliary air suspension kit, developed specifically for the Mercedes Benz Sprinter 200/300 series and the Volkswagen LT 28-35 series (June 1996 to June 2006 model Years). To ensure correct installation of the kit, it is strongly recommend that these instructions are read thoroughly before commencing any installation work. Installation should only be carried out by a suitably qualified mechanic or specialist installation facility. DSC Nederland will not accept any responsibility for faults or defects arising from incorrect installation, which automatically renders the guarantee invalid.

IMPORTANT: Manufacturer's Declaration Form

A manufacturer's declaration form is provided with your kit. Following installation of the kit please ensure that this form is completed, signed by a qualified fitter and a copy is returned to DSC Nederland by post, fax or e-mail. Our e-mail address is: info@dunlopsystems.nl

This kit is suitable for motorhomes and other vehicles with a <u>minimum</u> rear axle load of 1700kg (3750lbs).







Volkswagen Crafter 28-35

L.312.C.M

2. INTRODUCTION

Thank you for choosing an auxiliary air suspension kit from the range offered by *DSC Nederland*. Auxiliary air suspension is fitted in tandem with the standard steel springs of the vehicle suspension, and provides enhancements in terms of both the stability of the vehicle and the comfort of the passengers...

Vehicle Levelling

Simply by varying the air pressure in the springs, the vehicle can be levelled both front-to-rear and side-to-side. Keeping the vehicle level optimises stability, ensures correct headlamp beam distribution and reduces tyre wear arising from uneven distribution of weight.

Straight Line Stability

Straight line stability is greatly increased at higher speeds, and when subjected to buffeting from cross-winds or large overtaking vehicles

Reduced Body Roll

Body roll when cornering or negotiating roundabouts is significantly reduced.

Fatigue Reduction and Wear Compensation

Suspension fatigue is reduced, so helping to prevent leaf springs from sagging under repeated or constant loading.

Any sagging already present can be compensated-for. This is a particular benefit for motorhomes, which are always fully laden.

Ride Comfort

Air springs help to absorb shock loads from uneven road surfaces, therefore general ride quality is much improved.







Volkswagen Crafter 28-35

L.312.C.M

3. VERY IMPORTANT NOTES



Gross Vehicle Weight (GVW)

Air assist kits are not in themselves designed to increase the gross vehicle weight (GVW) rating of a vehicle. They do not legally allow for carriage of a load greater than the carrying capacity stated on the data plate of the vehicle.

Do not exceed the maximum load specified by the vehicle manufacturer...

- to avoid compromising passenger safety
- to prevent possible damage to the vehicle
- for legal reasons



Load Sensing Valve (LSV) Adjustment

If your vehicle is not fitted with an antilock braking system (ABS) then it will have a load sensing valve (LSV) to automatically adjust braking force under varying load conditions. This valve <u>must</u> be adjusted immediately after the fitting of an air assist kit and before the vehicle is driven again on public roads.

If the LSV is not adjusted following the fitting of an air assist kit, it may misjudge rear load conditions to the extent that the braking pressure applied to the rear brakes is not correct (e.g. the rear wheels may lock with no load on the rear axle). The consequences of this in terms of vehicle stability and safety are potentially serious.

Vehicle Uprating

Despite the above words of caution, it is possible to upgrade the weight rating of your vehicle. This must be carried-out by a specialist supplier that will...

- carry out any necessary modifications in addition to fitting the air assist kit
- complete documentation as necessary to inform the Vehicle and Operator Services Agency (VOSA) – a mandatory requirement
- supply and fit a new weight plate to replace the original plate supplied with the vehicle

This process applies to United Kingdom registered vehicles. The process in other countries may be different.







Volkswagen Crafter 28-35

L.312.C.M

Safety Guidance Note

The following very useful guidance note is available for free download from the *Health and Safety Executive* (HSE)...

PM85, July 2007 Safe recovery (and repair) of buses and coaches fitted with air suspension

The uniform resource locator (URL) for this document is...

http://www.hse.gov.uk/PUBNS/pm85.pdf








Volkswagen Crafter 28-35

L.312.C.M

4. COMPLETE ASSEMBLY

The complete (left-side) auxiliary air suspension assembly is shown by the diagram below...

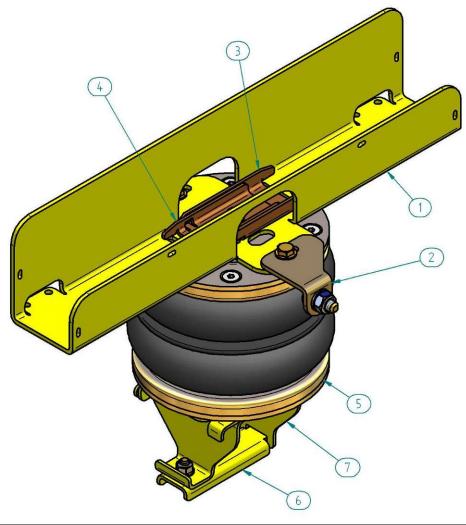

1	Upper Bracket
2	Load Sensing Valve Bracket
3	Mounting Plate 'A'
4	Mounting Plate 'B'
5	Air Bellow (170mm Nominal Diameter, 2 Convolute)
6	Lower Bracket Plate
7	Lower Bracket







 
Volkswagen Crafter 28-35

L.312.C.M

5. INSTRUCTIONS FOR INSTALLATION



Preparation and Precaution







Pay attention to your safety at all times during installation - always use axle stands to support the vehicle!



5.1 Bump Stop Removal and fitting of Upper Bracket Assembly

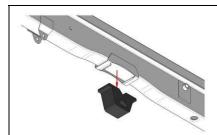

i. Remove the bump stop. If necessary use a long screwdriver or other implement to prize the stop free from its mount.

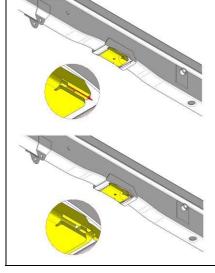

- ii. Offer the upper mounting plate assembly up to the bump stop frame. Slide the two parts* of the assembly apart and into the frame, as indicated, until they seat snugly with their M8 holes in alignment.









Volkswagen Crafter 28-35

L.312.C.M

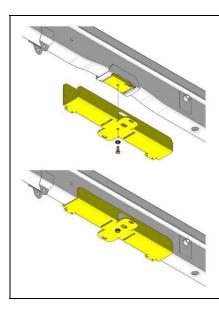


iii. Offer the upper mounting bracket up to the mounting plate such that the M8 holes are in alignment. Attach the bracket to the plate using a M8x20 bolt and flat washer.


5.2 Fitting of Lower Bracket to Axle

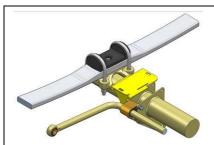

i. Place the lower bracket over the axle, ensuring correct orientation as shown

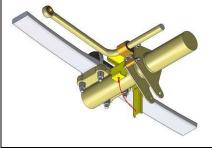

ii. Mate the tongue on one end of the lower bracket plate with the slot in the lower bracket, then swing the plate as shown until it contacts the flange on the lower plate with holes in alignment

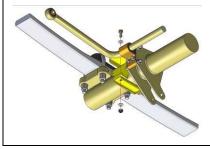

iii. Secure the bracket to the plate using a single bolt, two flat washers and a nut









Volkswagen Crafter 28-35

L.312.C.M


5.3 Fitting of the Air Bellow

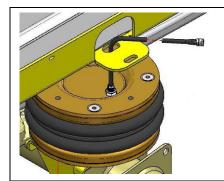

i. Connect the air tube to the bellow, noting colour designation: Black tube to left-hand spring, Blue tube to right-hand spring. Simply push-in the tube as far as it will travel and release (see Section 5.4). Feed the other end of the tube through the large hole in the upper bracket.

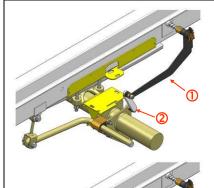

ii. Unscrew and disconnect the load sensing valve (LSV) linkage ① from the existing arm ②. Unscrew the arm from the axle bracket and remove it.

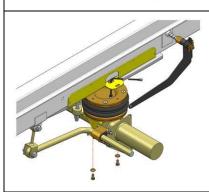

iii. Position the bellow between the chassis and the axle, and attach the bottom plate of the bellow to the lower bracket using two bolts and two flat washers. Do not fully tighten at this stage because the bellow may require alignment once inflated (see Section 5.7).








Volkswagen Crafter 28-35


L.312.C.M

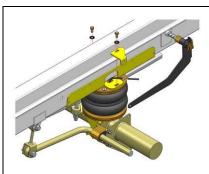

iv. Attach the top plate of the bellow to both the upper bracket and the load sensing valve bracket using two bolts and two flat washers. Do not fully tighten at this stage because the bellow may require alignment once inflated (see Section 5.7).



v. Attach the load sensing valve linkage to the bracket using a bolt, two flat washers and a nut.

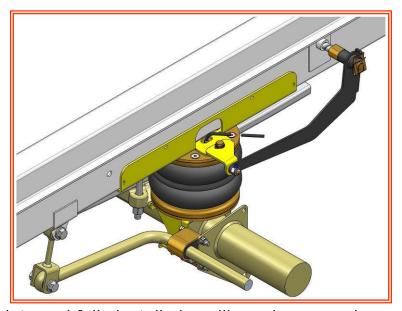

Complete and fully installed auxiliary air suspension system







Volkswagen Crafter 28-35

L.312.C.M

5.4 Fitting of Inflator Console

Option Valves



Option 2



Option 3





Your kit is supplied with one of the inflator options shown above...

- 'Option Valves', having two valves and a bracket (above, top-left)
- 'Option 1', 'Option 2' or 'Option 3', having both valves and pressure gauges

Mount the console in a position of your choice whereby it is firmly fixed, has some protection from the environment (particularly important for the console with gauges) and is easily accessible. Suggested possible locations include...

Console with Valves Only...

- on the rear bumper
- at the rear beside the license plate
- on the chassis next to a rear wheel
- in a service shutter
- beside the fuel cap

Console with Valves and Gauges...

- in the vehicle cabin, within reach and sight of the driver
- in the wall of a cupboard (motorhomes)
- in a service shutter

'Comfort' Packages

The 'Option 2' and 'Option 3' panels, as shown above, are each part of a *Comfort Package* that is supplied with a compressor (and also an air reservoir in the case of the 'Option 3' panel) for ease of spring inflation and ride height setting. For further information please ask your dealer.








Volkswagen Crafter 28-35


L.312.C.M

5.5 Tube Connection and Disconnection, Cutting and Routing

Connection and Disconnection

Tubes are connected as shown by the diagrams below...

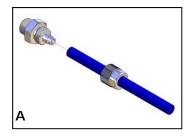

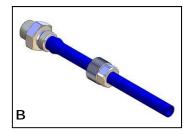



- A. Slide a nut over the end of the tube
- B. Push the tube onto the connector as far as possible
- C. Feed the nut up to the connector, fully tighten by hand and finally tighten one additional turn using spanners

Cutting

To achieve good sealing and air-tight fitting of tube ends to their connecting parts, it is very important to cut tubing cleanly and squarely. A dedicated guillotine action tubing cutter is recommended, or a craft knife if such a tool is not available. Do not use electrician's side cutters.



A dedicated tubing cutter - Recommended



Electrician's Side Cutters NOT Recommended







Volkswagen Crafter 28-35

L.312.C.M

Routing

Study the underside of the vehicle and decide how to route each branch of the air circuit...

- To minimise the risk of chafing, avoid running tubing over metal edges as much as possible
- Avoid close proximity to heat sources such as the exhaust assembly
- Choose a route that provides as much protection as possible from dirt, debris and any solid objects that may impact the underside of the vehicle

It is recommended that tubes are guided alongside brake lines as much as possible.



Use cable ties ('tie wraps') to secure tubing to the chassis, taking care not to over-tighten them.

5.6 Spring Inflation

Once installation of the air assist kit is complete, inflate the springs via the inflator console taking careful note of the following...



Maximum and Minimum Pressure

Maximum Pressure 7.0bar Minimum Pressure 0.5bar Do not exceed 7.0bar (101psi), which is the recommended maximum charge pressure for the air springs.

The springs may be deflated if the vehicle is to be stored for a lengthy period without use, but a pressure of at least 0.5bar (7.25psi) should be maintained at all times in order to avoid possible compression damage to the springs.








Volkswagen Crafter 28-35

L.312.C.M

5.7 Spring Alignment

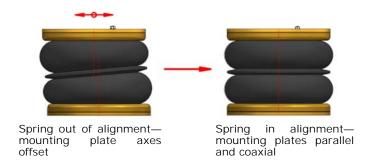



CAUTION!

Before fully tightening the bolts that secure the air spring to the upper and lower brackets, set the vehicle at ride height (spring height approximately 13.5cm) and ensure that the springs are correctly aligned.

5.8 Maintenance

Following installation, it is recommended that all metal parts are coated with a protective substance such as body wax.

The system does not require very much maintenance other than...

- to maintain air pressure in the springs. Much like a tyre, the system may lose a little air over time.
- to keep the air bellows clean. It is suggested that, when washing the vehicle, the bellows are inspected and cleaned as necessary (preferable by spraying). Look in particular for stones or grit trapped between convolutes, as this may damage the bellow.







Volkswagen Crafter 28-35

L.312.C.M

6. EPILOGUE

DSC Nederland hopes that you enjoy the benefits that your *DUNLOP* air suspension system will provide for you. To ensure optimal performance, we advise that you have your system checked frequently by qualified personnel. As recommended in the fitting instructions, it is important to coat all the steel parts with a protective substance such as body wax.

IMPORTANT: Manufacturer's Declaration Form

A manufacturer's declaration form is provided with your kit. Following installation of the kit please ensure that this form is completed, signed by a qualified fitter and a copy is returned to DSC Nederland by post, fax or e-mail. Our e-mail address is: info@dunlopsystems.nl


As a condition of your warranty, modifications to the system may only be carried out by personnel of DSC Nederland.

Enquiries

For general enquiries please contact one of our dealers. You can find them on our website.

www.dunlopsystems.nl



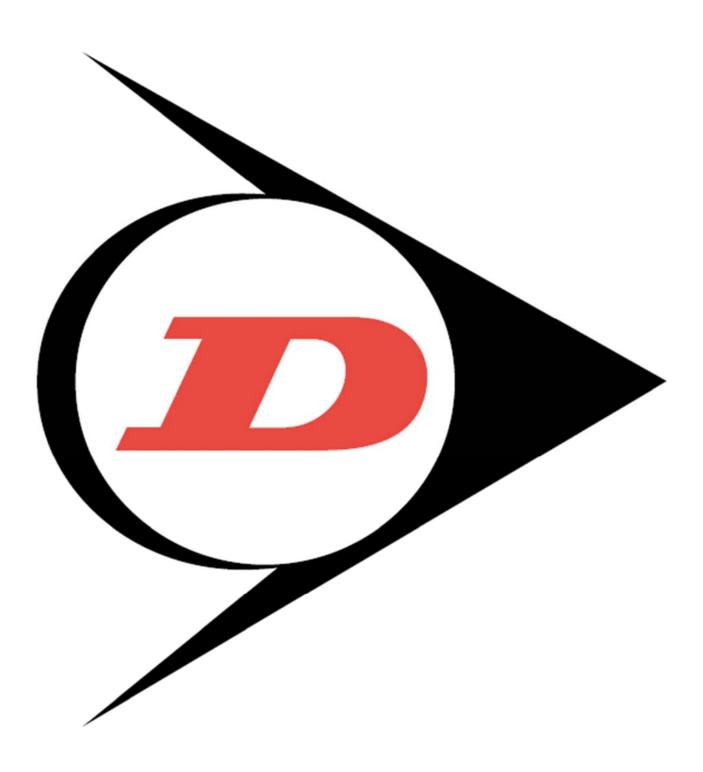

DSC Nederland B.V. Het Wegdam 22 7496 CA Hengevelde

Nederland

Tel.: +31 (0)547 333065 Fax.: +31 (0)547 333068 e-mail: <u>info@dunlopsystems.nl</u> www.dunlopsystems.nl