



DIRECTIONAL LEDs

Beacons | Lightbars | Minibars | Worklamps | Back-Up Alarms | Camera Systems


# **9014 SERIES** Surface Mount / Concealed Warning LED

The 9014 is a high intensity directional LED warning light specifically designed for vehicle headlight and tail light applications. In addition, the 9014 can also be surface mounted to the vehicle exterior using the included mounting bezel. It features six LEDs that provide exceptional warning with a sealed in-line driver module eliminates the need for a remote power supply. All 16 flash patterns are synchronizable with other Hide-A-LEDs and the 3510. Additional benefits of LED technology include low current draw and a long maintenance-free service life.



## **Features and Benefits**

- Six 1-watt high-intensity LEDs provide exceptional warning
- Head/tail light or surface mountable using included bezel
- 16 flash patterns including single, double, triple, quad, deci and cycle all
- Multiple heads are synchronizable (simultaneous or alternating operation)
- Colorless when not illuminated
- · In-line waterproof driver module eliminates need for a remote power supply
- UV stabilized polycarbonate lens, nickel-plated housing and 9' cable
- CE, R10, IP67
- Warranty: 2 years

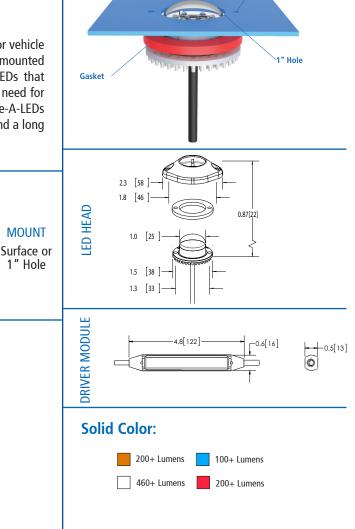





7/64" Pilot Screw Holes



# 9014 SERIES Surface Mount / Concealed Warning LED

DIRECTIONAL LEDs

Beacons | Lightbars | Minibars | Worklamps | Back-Up Alarms | Camera Systems

## **Flash Patterns**

Flash patterns are selected by touching the blue wire momentarily to power; the LED head will cycle through the available patterns.

	S T A N D A	RD	PATTERNS
#	PATTERNS	FREQUENCY	DESCRIPTION
1	Quad Flash	1.25 Hz	75 Quad FPM
2	Double Flash	1.25 Hz	75 Double FPM
3	Triple Flash	1.25 Hz	92.3 Triple FPM
4	Deciblast	1.25 Hz	85.5 Deci FPM
5	Single Flash	1.25 Hz	75 Single FPM
6	Mega Flash	1.25 Hz	114 Single FPM
7	Triple+Burst	1.25 Hz	82.5 Triple + Burst FPM
8	Steady On		Steady On

CYCLE PATTERNS				
#	Patterns	FREQUENCY	DESCRIPTION	
9	Cycle All		Cycle through patterns 1 to 7	
10	Double-Triple + Burst		2 Double, 2 Triple + Burst cycle	
11	Cycle Classic		1 Double, 1 Quad, 2 Mega cycle	
12	Quad-Mega		3 Quad, 4 Mega cycle	
13	Single-Quad		2 Single, 2 Quad cycle	
14	DeciBlast-Quad		2 DeciBlast, 2 Quad cycle	
15	Single-Triple-DeciBlast		2 Single, 2 Triple, 2 DeciBlast cycle	
16	Mega-Triple+Burst		1 Mega, 1 Triple+Burst cycle	

#### **Alternating/Simultaneous Flash Selection**


The yellow wire on each LED head is used to determine alternating or simultaneous operation with other heads in the system that are connected using the blue wire. The yellow wire has no function when 'Steady On' flash pattern is selected.

- Connect the YELLOW wire to either POWER or GROUND
- Heads with YELLOW connected to POWER fire SIMULTANEOUSLY with other heads connected to POWER
- Heads with YELLOW connected to GROUND fire SIMULTANEOUSLY with other heads connected to GROUND
- Heads with YELLOW connected to POWER fire ALTERNATELY with other heads connected to GROUND

Note: The blue wires of all LED heads must be connected together for the alternating/simultaneous function to operate.

#### Wiring Diagram

The diagram below shows a typical installation of 4 HIDE-A-LEDs using an on/off switch. The left and right-side heads are configured to flash alternately with each other using the blue wire to connect the two with the yellow wire on one connected to ground and the yellow wire on the other connected to power.

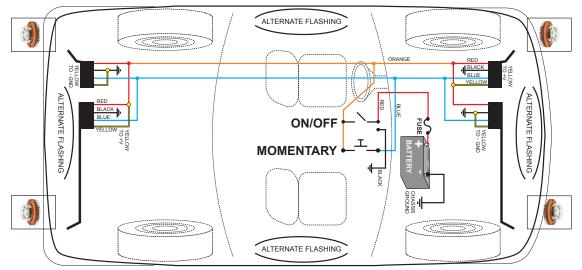

The front and rear heads are configured to flash independently of each other. In order to have the front and rear heads flash in sychronization, the blue wires from all units must be connected. The yellow wire can then be used to determine either alternate or simultaneous flash between each unit in the system by connecting to either power or ground.

